

# SMX POWER

3005 Avenida Simi, Simi Valley, CA 93063

TEL: (805) 582-2804 FAX: (805) 582-2308

[www.smxpower.com](http://www.smxpower.com)

## Plug-in Saver Charger for Cellphone

<u>Brand</u>	<u>Brand/Model</u>	<u>Part Number</u>
<b>AEG</b>	AEG 9020 / 9050	C-AEG-9020-S
	AEG 9080 / 922	C-NTL-922-S
<b>Alcatel</b>	Alcatel One Touch Pro / Easy / Club	C-ALC-HD-S
	Alcatel HC400 / HC600 / HC800 / HC1000	C-ALC-HC-SK
	Alcatel One Touch Easy Db / 300Series / 500Series / 700Series	C-ALC-DB-S
	OT 311/320/331/332/511/512/525/535/715/735/735i	C-ALC-OT511-SK
<b>Audiovox</b>	Audiovox 401 / 405 / 406	C-AUD-405-S
	Audiovox 440 / 450 / 470	C-AUD-440-S
	Audiovox PCX1000	C-AUD-1000-S
	Audiovox 501 / 505 / 506	C-AUD-505-S
	Audiovox 800 / 3000	C-AUD-3000-S
	Audiovox 3500 / 3600	C-AUD-3500-S
	Audiovox 4000 / 4500 / 9000	C-AUD-4000-S
	Audiovox 605 / 850	C-AUD-605-S
	Audiovox 1100/8100/8150/8200/8300	C-AUD-8100-S
	Audiovox 8400/8410/8450/8455/8500/8600/8900/8920/9900/9950	C-AUD-8900-SK
Audiovox 9100 / 9150 / 9155 / 9500	C-AUD-9100-S	
<b>Bosch</b>	Bosch 607 / Siemens S15	C-SIE-S15-S
	Bosch 906	C-MOT-STAR-S
	Bosch 908 / 909	C-BOS-908-S
<b>Ericsson</b>	Ericsson GH218/AH210/220/230/238/310/320/AH/EH237/238/EH288 /CA/GA318/PD328 /DH318 /336/338/ CH/GH/EH/TH/PH337/DH343/353/CF/CH/DF/GH/PH388/GF388/GH/PD398 /GE CT700	C-ERC-388-S
	Ericsson AH600/618/620/630/DH/KH668/CA638/AF/EF738/PF768/AF778/CF/GF788/CF/DF/KF /GH688/CF/SH888/S/SH868/AH/GA628/768/T10/T18/A1018/A1028/R250/280/290 /A1228D	C-ERC-788-SK
	Ericsson A2618/A2628/T100/T200/T20/T28/T29/T300/T310/R300/T39/T600/T60/T61/T65/T66/T68 /R320/R380/R520/R600/HCA-15/HCH-23/HCH-24/HCX-10/S700/P800/P900/Z200 /Z600/Z1010	C-ERC-T28-S
<b>Lucky Gold</b>	LG300	C-LGS-300-S
	LG330 / 2300	C-LGS-330-S
	LG510/520/110/115/120	C-LGS-510-S
	LG 6000 / 7000 / 7020 / 7030 / 7100 / 8080	C-LGS-7030-S
<b>MAXON</b>	MAXON A30	C-MAX-A30-S

## *Plug-in Saver Charger for Cellphone*

<b>Mitsubishi</b>	Mitsubishi MT30 / AEARI	C-MIT-MT30-SK
	Mitsubishi Astral / Galaxy / Geo / G310	C-MIT-ASTRAL-SK
	Mitsubishi MARS	C-MIT-MARS-S
	Mitsubishi Neptune	C-MIT-NPT-S
<b>Motorola</b>	Motorola PT500	C-MOT-500-S
	Motorola 650E	C-MOT-650-S
	Motorola 8200/8400/8700/87C/D460/Elite/Micro Tac III	C-MOT-8200-D
	Motorola d160/d170/d368/d520/d560/M3188/M3588/M3688/M3788/M3888/JAZZ	C-MOT-d160-SK
	Motorola cd920/cd928/Star Tac/Slim Lite/L2000/V2088/V3688/V3620/V8088/P8088/A6188/T8097 /L7089/A388/Bosch M-com 906/P7689/L-7000/P-7000/P-8000/V8000/V3000 /Timeport 7382/Timeport 7389/V101	C-MOT-STAR-S
	Motorola T2288/V2288/T2267/V2267/T2297/V2297/T2282/V2282/T2290/V2260/V2397/T193/C331 /C332	C-MOT-T2288-SK
	Motorola V120C/V2000/T270/270C/P280/T280/I30SX/T30/C300/C331(TDMA)/C332/C333/C353 /A388/I50/I55SR/I60C/V60/V66/I66/T720/T721/T731/V70/I80S/A835/I85/I88S/I90/I90C	C-MOT-I50-S
	Motorola T191/T190	C-MOT-T191-S
	Motorola E365	C-MOT-E365-S
	<b>NEC</b>	NEC P7 / DT2000 / P700
NEC G8		C-NEC-G8-S
NEC G9		C-NEC-G9-S
NEC DB2000 / DB4000 / DB4100 / 2600		C-NEC-2000-S
NEC Rocket Max		C-ORB-905-S
NEC 21i		C-NEC-N21i-S
NEC Mobile Pro 300		C-NEC-300-SK
NEC N341i		C-NEC-N341i-S
<b>Neo Point</b>	Neo Point 1000	C-NPT-1000-S
<b>Nextel</b>	Nextel I500 / I700	C-NXT-500-SK
	Nextel iDEN 600	C-NXT-nextel-S
	Nextel iDEN 1000	C-NXT-1000-S
<b>Nokia</b>	Nokia 2010 / 2110 / 2110i / 2120 / 232	C-NOK-2110-SK
	Nokia 636 / 909 / 1610 / 3110 / 3180 / 8110 / 8148 / Ringo	C-NOK-8110-SK
	Nokia 9000 / 9110	C-NOK-9000-SK
	Nokia 1100/1221/1260/1261/2285/252/282/3200/3210/3250/3310/3320/3321/3330/3360/3361 /3390/3395/3410/3510/3560/3570/3585/3585i/3590/3650/5110/5120/5125/5130/5140/5158 /5160/5165/5170/5170i/5180i/5185/5185i/5190/5210/6110/6120/6138/6150/6160/6161 /6162/6185i/6190/6210/6220/6230/6250/6310/6310i/6340/6340i/6360/6370/6385/6510	C-NOK-3210-SK

## *Plug-in Saver Charger for Cellphone*

/6590/6600/6610/6650/6800/6820/7110/7160/7190/7200/7210/7600/7610/7650/7700

/8210/8250/8260/8265/8265i/8270/8290/8290i/8310/8390/8810/8850/8855/8860/8890

/8910/9290/9500

Nokia 918 / 636 / 638 / 1000

C-NOK-636-SK

### **Panasonic**

Panasonic G600

C-PAN-G600-S

Panasonic G400 / G450 / G500 / G520

C-PAN-G400-S

Panasonic GD30 / GD50 / GD70 / GD90 / TX210 / TX220

C-PAN-GD70-S

Panasonic GD52/GD53/GD68/GD67/GD72/GD75/GD76/GD80/GD85/GD87/GD88/GD92/GD93

C-PAN-GD92-S

/GD95/GD96/TX310(Allure)/TX320 (Versio)

Panasonic GD55 / G50 / G51

C-PAN-GD55-S

Panasonic X60 / X66 / X70 / X88

C-PAN-X70-S

### **Philips**

Philips GENIE / GENIE 898

C-PHP-GENIE-S

Philips Spark / Diga / Aeon

C-PHP-SPARK-SK

Philips FIZZ

C-PHP-FIZZ-S

Philips SAVVY Series/G2K/Ozeo/Xenium/330/929/989/639/fisio 625

C-PHP-SAVVY-S

Philips 530/350/355

C-PHP-530-SK

### **Qualcomm**

Qualcomm QCP-820 / 2700 / SONY 1201 (CDMA)

C-SNY-1201-S

Qualcomm Q

C-QCM-Q-S

Qualcomm Q860 / 1960 / 2760

C-QCM-860-S

Qualcomm QCP 2035/2035a/2027/Kyocera 1135/1155/2035/2119/2119b/2135/2235/2255/2325

C-QCM-2035-SK

/2345/3225/3245/7135/KE413/413C/414/423/423C/424/424C/434/434C/KX413/414

Qualcomm 3035/Kyocera 6035

C-QCM-3035-SK

Kyocera SE47

C-QCM-SE47-S

Kyocera 5135/S14

C-QCM-5135-S

### **Sagem**

Sagem RC430

C-SAG-RC430-S

Sagem MC738 / RC730 / DC818

C-SAG-RC730-S

Sagem MC912/MC918/MC320/MC930/MC940/MC950/MC932/MC936/MC939/MC968/MC959/3000

C-SAG-MC939-S

/3020/3026/3040/3042/3052/MY-X5/MY-X3/MY-X3-2/MY-6

Sagem MY-C2

C-SAG-C2-S

### **Samsung**

Samsung SGH200

C-SAM-SGH200-S

Samsung SGH500

C-SAM-SGH500-S

Samsung SGH1000 / 800 / N160

C-SAM-SGH1000-S

Samsung SGH210 / 530

C-SAM-SGH530-S

Samsung SGH2000

C-SAM-SGH2000-S

Samsung T100

C-SAM-T100-S

Samsung A300/A400/N400/R210/A228/N370/R225/R225M/A310/A288

C-SAM-A300-S

/N500/N620/Q200/T100/S307/X426

## *Plug-in Saver Charger for Cellphone*

	SGH600/2100/2200/2400	C-SAM-SGH600-S
	SGH2500/3500/SCH2530/8580/8500/6100/N150/T300/411/M100	C-SAM-SGH3500-S
	N200 / T300 / A400 / N300	C-SAM-N200-S
	S100	C-SAM-S100-S
	N240 / N400 / A460 / A520 / A540	C-SAM-A540-SK
	N105 / Q105	
<b>Sanyo</b>	SCP3000/3500/4000/4500/4700	C-SYO-3000-S
	SCP4900/5300/5400/5500/7200/7300/8100/PM8200/RL4920/2000/2500/7300/VM4500	C-SYO-4900-S
	SCP5000/5150/6000/6200/6400	C-SYO-5000-S
<b>Sharp</b>	Sharp GX10	C-SHA-GX10-S
	Sharp TM100	C-SHA-TM100-S
<b>Siemens</b>	Siemens S3 / S3 COM / S3+	C-SIE-S3-S
	Siemens S4	C-SIE-S4-S
	Siemens S6 / S6D	C-SIE-S6-SK
	Siemens C10 / C11 / S10	C-SIE-C10-SK
	Siemens S15 / Bosch 607	C-BOS-607-S
	Siemens C25/C2588/S25/S2588/A35/C35i/S35i/M35i/A36/A40/SL42/C45/S45/S45i/SL45/SL45i /ME45/M46/S46/A50/M50/MT50/3568i/6688/6618/S45/3618	C-SIE-SL45-S
	Siemens A55/C55/M55/S55/SL55/A56/C56/CT56/S57/A60/C60/CX60/C62/CF62/MC60/SX1	C-SIE-C55-S
	Siemens CL50/8008	C-SIE-CL50-S
	Siemens ST55	C-SIE-ST55-S
<b>SONY</b>	SONY CM-DX 1000	C-SIE-S4-S
	SONY CM-DX 2000 / CM-DZ1 / CM-R100 / 1201	C-SIE-S6-SK
	SONY CM-DZ1	C-SNY-Z1-S
	SONY CMD-C1	C-SNY-C1-SK
	SONY CM-R100	C-SNY-100-SK
	SONY 1201	C-SNY-1201-S
	SONY CMD-CD5	C-SNY-CD5-S
	SONY J5 / J7 / Z7 / J6 / J70	C-SNY-Z16-S
<b>Sprint</b>	Sprint LXC-D100	C-SPR-D100-S
<b>Telital</b>	Telital Galileo	C-TLT-TELI-SK
	Telital GM210 / GM830	C-TLT-210-S
	Telital Amico	C-TLT-Amico-S
<b>Toshiba</b>	Toshiba TS21i	C-TOS-21i-S
<b>Uniden</b>	Uniden Mini 200	C-UNI-MN200-SK

## *Plug-in Saver Charger for Cellphone*

- C** : indicates Plug-In Charger / Saver  
**CR** : indicates Plug-In Charger / Saver + External antenna adapter  
**T1** : indicates "Travel charger"  
**M** : indicates "Mini Hands Free Car Kits"  
**MR** : indicates "Mini Hands Free Car Kits" + "External Antenna Adapter"  
**RF** : indicates "External Antenna Adapter"
- D** : indicates Dual P.C.Board + Plug-in connector  
**DK** : indicates Dual P.C.Board + DC Jack  
**DC** : indicates Dual P.C.Board + Plug-in connector + Rubber Cups  
**DM** : indicates Dual P.C.Board + Plug-in connector + Molding  
**S** : indicates Single P.C.Board + Plug-in connector  
**SK** : indicates Single P.C.Board + DC Jack

### Abbreviation -- Maker

<b>3COM: 3COM</b>	<b>AEG: AEG</b>	<b>ALC: ALCATEL</b>
<b>AUD: AUDIOVOX</b>	<b>BOS: BOSCH</b>	<b>CO2: O2</b>
<b>CSO: CASIO</b>	<b>DAN: DANCALL</b>	<b>ERC: ERICSSON</b>
<b>IPQ: COMPAQ IPAQ</b>	<b>HAG: HAGENUK</b>	<b>HP: HP JORNADA</b>
<b>HSP: HANDSPRING TREO</b>	<b>LGS: Lucky Gold Star</b>	<b>MAX: MAXON</b>
<b>MOT: MOTOROLA</b>	<b>MTC: MITAC</b>	<b>MTR: MATRA</b>
<b>NEC: NEC</b>	<b>NOK: NOKIA</b>	<b>NPT: NEO POINT</b>
<b>NTL: NORTEL</b>	<b>NXT: NEXTEL</b>	<b>ORB: ORBITEL</b>
<b>PAN: PANASONIC</b>	<b>PHP: PHILIPS</b>	<b>QCM: QUALCOMM</b>
<b>SAG: SAGEM</b>	<b>SAM: SAMSUNG</b>	<b>SHA: SHARP</b>
<b>SIE: SIEMENS</b>	<b>SNY: SONY</b>	<b>SPR: SPRINT</b>
<b>SYO: SANYO</b>	<b>TLT: TELITAL</b>	<b>T-M: T-MOBILE</b>
<b>TOS: TOSHIBA</b>	<b>UNI: UNIDEN</b>	